PROGRAMMING vidence






TOUCHSCREEN REGULATOR

PROGRAMMING INSTRUCTIONS: Ref PSE1-000M004-GB

577, rue Célestin Hennion 59144 Gommegnies Tel: (33) 03 27 28 18 18 Fax: (33) 03 27 49 80 41 http://www.eurofours.com email:infos@eurofours.com


PRESENTATION OF THE CONTROL PANEL p	.2
Explanation of the symbols showing the condition of the oven p	.3
ACCESS LEVEL p	.4
ACCESS TO THE VARIOUS MENUS p	.5
USER MENU: ACCESS TO THE PARAMETERS p	.5
Adjustment of recipes p	.6
Date and Time adjustments p	
Setting of control board parameters p	.9

The company reserves the right to change specifications without notice - Copying forbidden

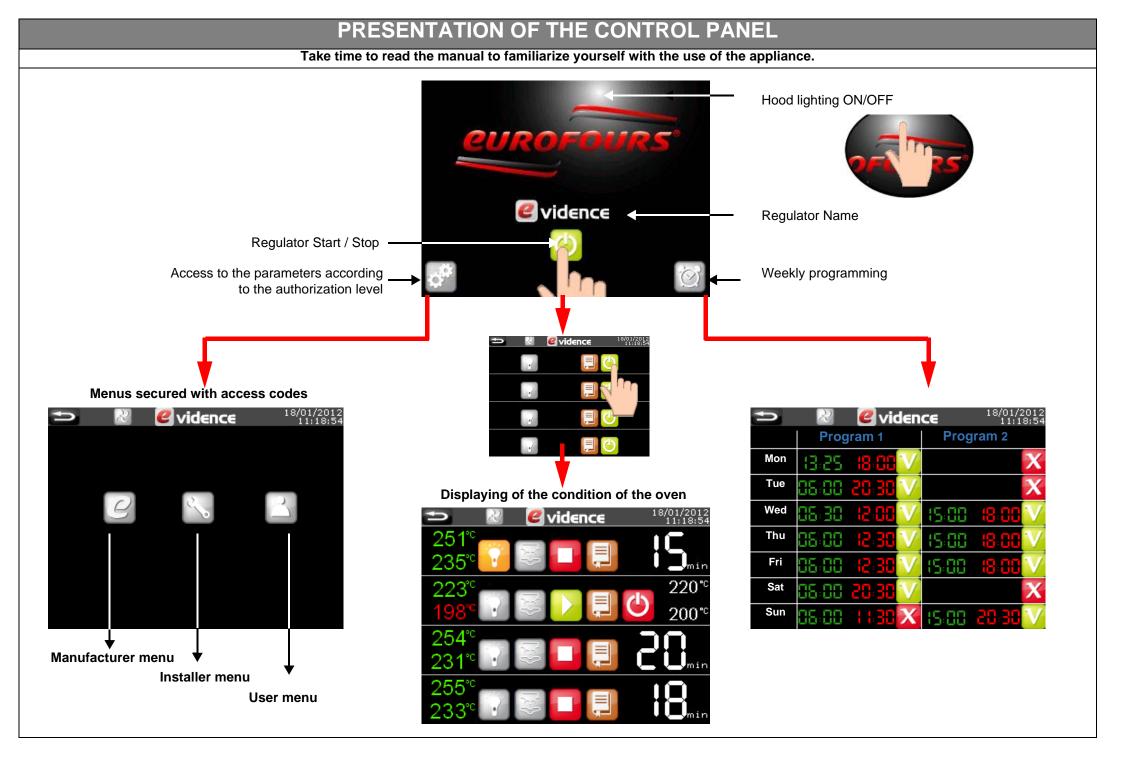

Explanation of the symbols showing the condition of the oven



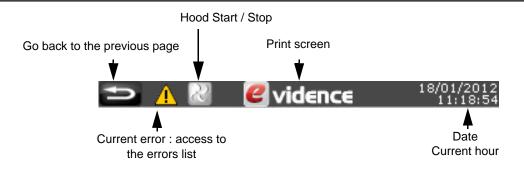

2 reading direction on this screen:

- Horizontal :The number lines represents the number of levels of the oven. A line shows the condition of the corresponding level.
- Vertical: Each column shows the condition of the following parameters (from left to right on the picture).
- ✓ Level real temperatures (crown/deck): Displaying (no action possible). A level is ready for baking when both real temperatures (crown and deck) become green.
- ✓ Lighting : Push the icon to switch on/switch off the level light



- ✓ When baking starts, the icon becomes blue during the automatic steam injection programmed in the recipe and reverts to grey as soon as steam injection stops
 - **₹**
 - During cycle, press to obtain steam



. Release to stop steam injection.

- ✓ Level with baking in progress or out of baking.
- Baking in progress. Press to stop the baking.
- No baking in progress. Press to start the baking.

Selection of the recipes: Access to the recipes list



Select the desired recipe

- ✓ Level status :
- × Uevel off.
- Level energized + Displaying of the name and T° of the last recipe used.
- Baking time countdown: Access to the fast modification of the cycle in progress



Increase/Decrease the baking duration Increase/Decrease the baking T°:

- Ceiling
- Floor

ACCESS LEVEL



The ability to modify the settings is governed by the authorization level :

Authorization « 0 »: No single setting can be modified. The only active keys are :

- ✓ Control board starting-up
- ✓ Regulator stop
- ✓ Baking starting
- ✓ Selection of the recipes

Authorization « 1 » = The MODIFICATION of a recipe during the baking is POSSIBLE, but SAVING of the modified recipe is NOT POSSIBLE.


- ✓ Manual steam injection
- + Authorization « 0 »

Authorization « 2 » = Access to the recipes programming



- + Authorization « 0 »
- + Authorization « 1 »

ACCESS TO THE VARIOUS MENUS

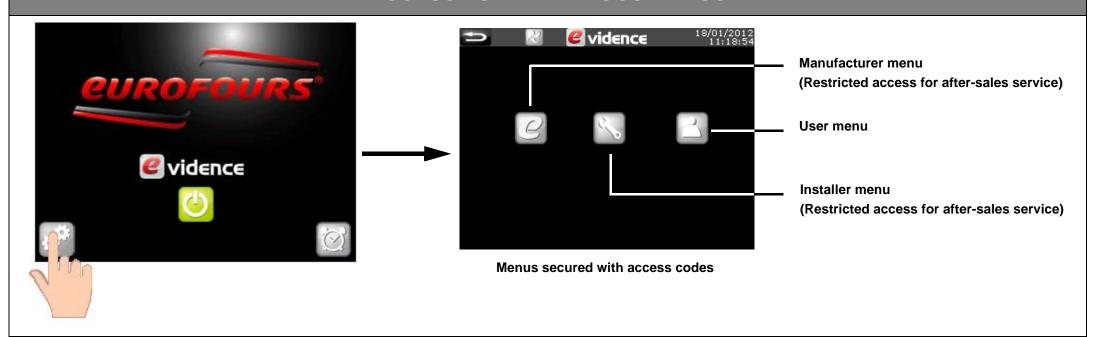


USER MENU: ACCESS TO THE PARAMETERS


During the baking, the programming access is locked




Adjustment of recipes


Capture of the recipe name

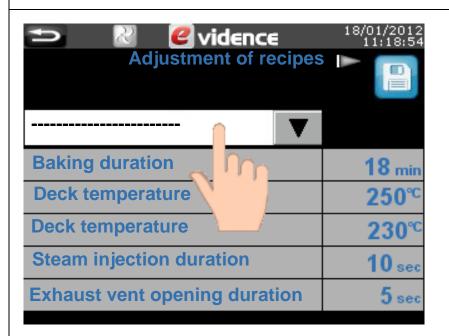


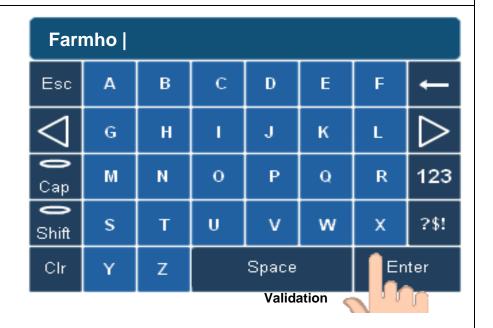

The recipe name can be composed with letters, numbers and special characters. Number of characters available : 25 (when you enter more than 25 characters, the text becomes red)

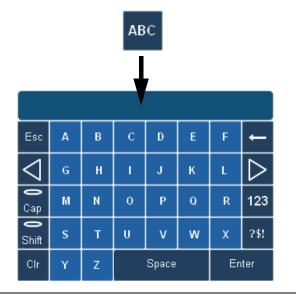

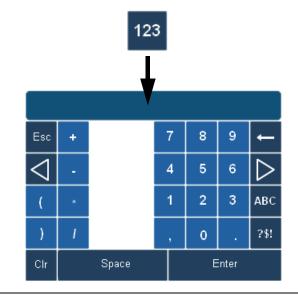


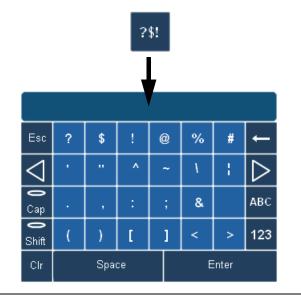


Setting of parameters



Press the right boxes to adjust: the baking duration, the temperatures, the steam injection duration and the delay for exhaust vent opening before the end of baking (this last field appears only when an electric exhaust vent is present).

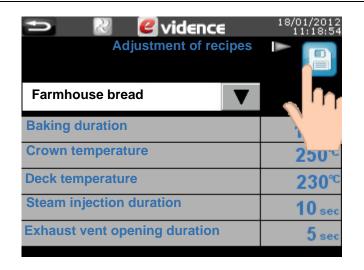

Press the floppy disk icon to register the recipe

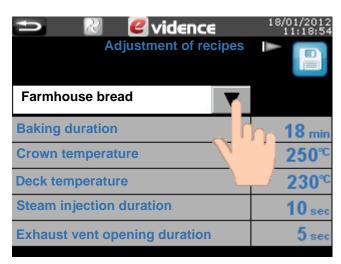




To modify an existing recipe, select the recipe and then proceed as describe here above




Do not forget to press the floppy disk icon to register the modification(s) done in the recipe(s)

Date and Time adjustments 2 vidence Press the floppy disk icon to 18/01/2012 11:18:54 Ñ register. Adjustment of recipes After 3 to 5 seconds, the date and time are updated in the gray band 10 mir 250° 230° **e** vidence 10 sec 5 sec **Settings Date & Hour** Date 31/03/2013 13/04/12 **EXIT** 03/31/2013 10:57:25 Hour Day (Automatically calculated in function of the date) Press on each zone to be modified

Setting of control board parameters **2** vidence Delay before standby (mn): **0**: The screen remains always light on. >0 : The value mentioned represent the number of minutes without any operation. After this delay, the screen turns off. Setting range: 1, 2, 5, 10, 15 and 30 Touch the screen to light it on. **e** vidence **User 1/2** Language Access level **Buzzer Volume** T°Increment: Whatever the measuring unit (° C or ° F), the increment for setting the temperature is 1 or 5

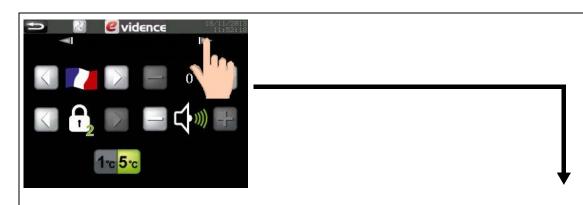

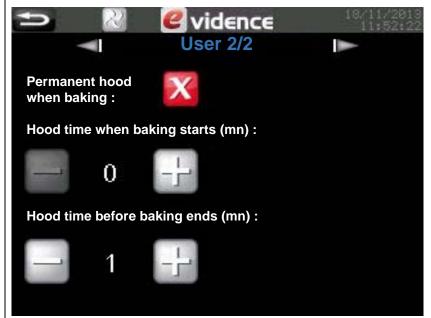

The «Hood runs permanently during baking» function is not activated. In that case, an operating time of the hood at the beginning of baking and a delay for starting of the hood before the end of baking can be set. The adjustment range of these both durations is from 0 to 5 minutes.



The «Hood runs permanently during baking» function is activated. In that case, both operating time of the hood during baking disappear.